

Supersession Sequence	Item	Item Description
6 - Current	649368-58A2	FUEL PUMP ASSEMBLY
5 - Superseded	649368-33A4	FUEL PUMP ASSEMBLY>>
4 - Superseded	649368-33A2	FUEL PUMP ASM W/FITTING>>
3 - Superseded	649368-9A3	FUEL PUMP ASM W/FITTING>>
2 - Superseded	646758-9A3	FUEL PUMP ASM W/FITTINGS
1 - Superseded	639508-9A4	FUEL PUMP ASSEMBLY
8 - Current	649368-58A1	FUEL PUMP ASSEMBLY
7 - Superseded	649368-33A3	FUEL PUMP ASSEMBLY>>
6 - Superseded	649368-33A1	FUEL PUMP ASM W/FITTING>>
5 - Superseded	649368-9A2	FUEL PUMP ASM W/FITTING>>
4 - Superseded	646758-9A2	FUEL PUMP ASM W/FITTINGS
3 - Superseded	646758-9A1	FUEL PUMP ASM W/FITTINGS
2 - Superseded	639508-9A2	FUEL PUMP ASSEMBLY
1 - Superseded	639508-9A1	PUMP ASM FUEL
7 - Current	649368-57A1	FUEL PUMP ASSEMBLY
6 - Superseded	649368-32A2	FUEL PUMP ASSEMBLY>>
5 - Superseded	649368-32A1	FUEL PUMP ASM>>
4 - Superseded	649368-8A1	PUMP ASM W/FITTINGS-FUEL>>
3 - Superseded	646758-8A1	PUMP ASM W/FITTINGS-FUEL
2 - Superseded	639508-8A2	PUMP ASM-FUEL
1 - Superseded	639508-8A1	PUMP-FUEL
6 - Current	649368-66A2	FUEL PUMP ASSEMBLY
5 - Superseded	649368-30A4	FUEL PUMP ASSEMBLY>>
4 - Superseded	649368-30A2	FUEL PUMP ASM W/FITTING>>
3 - Superseded	649368-6A2	FUEL PUMP ASM W/FITTING>>
2 - Superseded	646758-6A2	FUEL PUMP ASM W/FITTINGS
1 - Superseded	639508-6A5	FUEL PUMP ASSEMBLY
9 - Current	649368-66A1	FUEL PUMP ASSEMBLY
8 - Superseded	649368-30A3	FUEL PUMP ASSEMBLY>>
7 - Superseded	649368-30A1	FUEL PUMP ASM W/FITTING>>
6 - Superseded	649368-6A1	FUEL PUMP ASM W/FITTING>>
5 - Superseded	646758-6A1	FUEL PUMP ASM W/FITTINGS
4 - Superseded	639508-6A4	FUEL PUMP ASSEMBLY
3 - Superseded	639508-6A3	PUMP ASM-FUEL
2 - Superseded	639508-6A2	PUMP-FUEL
1 - Superseded	639508-6A1	PUMP ASM-FUEL
9 - Current	649368-56A1	FUEL PUMP ASSEMBLY
8 - Superseded	649368-29A2	FUEL PUMP ASSEMBLY>>
7 - Superseded	649368-29A1	FUEL PUMP ASM>>
6 - Superseded	649368-5A1	PUMP ASM W/FITTINGS-FUEL>>
5 - Superseded	646758-5A1	PUMP ASM W/FITTINGS-FUEL
4 - Superseded	639508-5A2	PUMP ASM-FUEL
3 - Superseded	639508-5A1	PMP ASM >>
2 - Superseded	632637-1A2	PUMP ASM-FUEL
1 - Superseded	632637-1A1	PUMP ASM-FUEL

8 - Current	649368-65A1	FUEL PUMP ASSEMBLY
7 - Superseded	649368-28A2	FUEL PUMP ASSEMBLY>>
6 - Superseded	649368-28A1	FUEL PUMP ASM W/FITTING>>
5 - Superseded	649368-4A1	FUEL PUMP ASM W/FITTING>>
4 - Superseded	646758-4A1	FUEL PUMP ASM W/FITTING>>
3 - Superseded	639508-4A2	FUEL PUMP ASSEMBLY
2 - Superseded	634263-1A1	PUMP-FUEL & PRESS COMP
1 - Superseded	634263-1A2	PUMP-FUEL & PRES COMP ASM
6 - Current	649368-64A1	FUEL PUMP ASSEMBLY
5 - Superseded	649368-27A2	FUEL PUMP ASSEMBLY>>
4 - Superseded	649368-27A1	FUEL PUMP ASM W/FITTING>>
3 - Superseded	649368-3A1	FUEL PUMP ASM W/FITTING>>
2 - Superseded	646758-3A1	FUEL PUMP ASM W/FITTINGS
1 - Superseded	639508-3A1	FUEL PUMP & SEPARATOR ASM
6 - Current	649368-63A2	FUEL PUMP ASSEMBLY
5 - Superseded	649368-26A4	FUEL PUMP ASSEMBLY>>
4 - Superseded	649368-26A2	FUEL PUMP ASM W/FITTING>>
3 - Superseded	649368-2A2	FUEL PUMP ASM W/FITTING>>
2 - Superseded	646758-2A2	FUEL PUMP ASM W/FITTINGS
1 - Superseded	639508-2A3	FUEL PUMP ASSEMBLY
6 - Current	649368-63A1	FUEL PUMP ASSEMBLY
5 - Superseded	649368-26A3	FUEL PUMP ASSEMBLY>>
4 - Superseded	649368-26A1	FUEL PUMP ASM W/FITTING>>
3 - Superseded	649368-2A1	FUEL PUMP ASM W/FITTING>>
2 - Superseded	646758-2A1	FUEL PUMP ASM W/FITTINGS
1 - Superseded	639508-2A1	FUEL PUMP ASSEMBLY
5 - Current	649368-60A1	FUEL PUMP ASSEMBLY
4 - Superseded	649368-44A10	FUEL PUMP ASSEMBLY>>
3 - Superseded	649368-44A2	FUEL PUMP ASM W/FITTING>>
2 - Superseded	649368-20A2	FUEL PUMP ASM W/FITTING>>
1 - Superseded	653010-1	FUEL PUMP ASM-COMPLETE>>
5 - Current	649368-62A1	FUEL PUMP ASM W/FITTING
4 - Superseded	649368-25A2	FUEL PUMP ASM W/FITTING>>
3 - Superseded	649368-1A2	FUEL PUMP ASM W/FITTING>>
2 - Superseded	646758-1A2	FUEL PUMP ASM W/FITTINGS
1 - Superseded	639508-1A2	FUEL PUMP ASSEMBLY
7 - Current	649368-62A2	FUEL PUMP ASSEMBLY
6 - Superseded	649368-25A3	FUEL PUMP ASSEMBLY>>
5 - Superseded	649368-25A1	FUEL PUMP ASM W/FITTING>>
4 - Superseded	649368-1A1	FUEL PUMP ASM W/FITTING>>
3 - Superseded	646758-1A1	FUEL PUMP ASM W/FITTINGS
2 - Superseded	639508-1A1	*M* FUEL PUMP ASSEMBLY
1 - Superseded	639508-1	*M* FUEL PUMP ASSEMBLY

7 - Current	649368-70A1	FUEL PUMP ASSEMBLY
6 - Superseded	649368-37A3	FUEL PUMP ASSEMBLY>>
5 - Superseded	649368-37A1	FUEL PUMP ASM W/FITTING>>
4 - Superseded	649368-13A4	FUEL PUMP ASM W/FITTING>>
3 - Superseded	649368-13A1	FUEL PUMP ASM W/FITTING>>
2 - Superseded	646758-13A1	FUEL PUMP ASM W/FITTINGS
1 - Superseded	639508-13A1	PMP ASM >>
8 - Current	649368-70A2	FUEL PUMP ASSEMBLY
7 - Superseded	649368-37A4	FUEL PUMP ASSEMBLY>>
6 - Superseded	649368-37A2	FUEL PUMP ASM W/FITTING>>
5 - Superseded	649368-13A3	FUEL PUMP ASM W/FITTING>>
4 - Superseded	649368-13A2	FUEL PUMP ASM W/FITTING>>
3 - Superseded	646758-13A2	FUEL PUMP ASM W/FITTING>>
2 - Superseded	639508-13A4	FUEL PUMP ASSEMBLY
1 - Superseded	639508-13A3	F/P >>
9 - Current	649368-69A2	FUEL PUMP ASSEMBLY
8 - Superseded	649368-36A4	FUEL PUMP ASSEMBLY>>
7 - Superseded	649368-36A2	FUEL PUMP ASM W/FITTING>>
6 - Superseded	649368-12A4	FUEL PUMP ASM W/FITTING>>
5 - Superseded	649368-12A1	FUEL PUMP ASM W/FITTING>>
4 - Superseded	646758-12A1	FUEL PUMP ASM W/FITTINGS
3 - Superseded	639508-12A4	FUEL PUMP ASSEMBLY
2 - Superseded	639508-12A2	F/P >>
1 - Superseded	639508-12A1	PMP ASM >>
8 - Current	649368-69A1	FUEL PUMP ASSEMBLY
7 - Superseded	649368-36A3	FUEL PUMP ASSEMBLY>>
6 - Superseded	649368-36A1	FUEL PUMP ASM W/FITTING>>
5 - Superseded	649368-12A3	FUEL PUMP ASM W/FITTING>>
4 - Superseded	649368-12A2	FUEL PUMP ASM W/FITTING>>
3 - Superseded	646758-12A2	FUEL PUMP ASM W/FITTINGS
2 - Superseded	639508-12A5	FUEL PUMP ASSEMBLY
1 - Superseded	639508-12A3	F/P >>
6 - Current	649368-68A1	FUEL PUMP ASSEMBLY
5 - Superseded	649368-35A2	FUEL PUMP ASSEMBLY>>
4 - Superseded	649368-35A1	FUEL PUMP ASM W/FITTING>>
3 - Superseded	649368-11A1	FUEL PUMP ASM W/FITTING>>
2 - Superseded	646758-11A1	FUEL PUMP ASM W/FITTINGS
1 - Superseded	639508-11A1	FUEL PUMP ASSEMBLY
6 - Current	649368-67A1	FUEL PUMP ASSEMBLY
5 - Superseded	649368-34A2	FUEL PUMP ASSEMBLY>>
4 - Superseded	649368-34A1	FUEL PUMP ASM W/FITTING>>
3 - Superseded	649368-10A1	FUEL PUMP ASM W/FITTING>>
2 - Superseded	646758-10A1	FUEL PUMP ASM W/FITTINGS
1 - Superseded	639508-10A1	FUEL PUMP ASSEMBLY

6 - Current	655921-5A1	FUEL PUMP ASM W/FITTINGS
5 - Superseded	655921-2A1	FUEL PUMP ASM W/FITTINGS>>
4 - Superseded	649364-2A2	FUEL PUMP ASM W/FITTING>>
3 - Superseded	646759-2A2	FUEL PUMP ASM W/FITTINGS
2 - Superseded	638157-2A2	*M* FUEL PUMP ASSEMBLY
1 - Superseded	634541-2A2	PUMP-FUEL
7 - Current	655921-5A2	FUEL PUMP ASM W/FITTINGS
6 - Superseded	655921-2A2	FUEL PUMP ASM W/FITTINGS>>
5 - Superseded	649364-2A1	FUEL PUMP ASM W/FITTING>>
4 - Superseded	646759-2A1	FUEL PUMP ASM W/FITTINGS
3 - Superseded	638157-2A1	*M* FUEL PUMP ASSEMBLY
2 - Superseded	634541-2A1	* SUPSD BY 638157-2A1
1 - Superseded	629373-1A1	SUPSEDED BY 634541-1A1
9 - Current	646768-6A1	FUEL PUMP ASSEMBLY
8 - Superseded	646768-4A2	FUEL PUMP ASSEMBLY>>
7 - Superseded	646768-4A1	FUEL PUMP ASM W/FITT>>
6 - Superseded	646768-2A1	PUMP ASM FUEL>>
5 - Superseded	642650-2A1	PUMP ASM W/FITTINGS-FUEL
4 - Superseded	632818-5A4	PUMP ASM - FUEL
3 - Superseded	632818-5A3	PMP ASM >>
2 - Superseded	632818-5A2	PUMP-FUEL
1 - Superseded	630751-3A1	PMP-ASM >>
5 - Current	646768-5A3	FUEL PUMP ASSEMBLY
4 - Superseded	646768-3A6	FUEL PUMP ASSEMBLY>>
3 - Superseded	646768-3A3	FUEL PUMP ASM W/FITTING>>
2 - Superseded	646768-1A3	PUMP ASM FUEL>>
1 - Superseded	642650-1A4	PUMP ASM-FUEL
5 - Current	646768-5A2	FUEL PUMP ASSEMBLY
4 - Superseded	646768-3A5	FUEL PUMP ASSEMBLY>>
3 - Superseded	646768-3A2	FUEL PUMP ASM W/FITT>>
2 - Superseded	646768-1A2	PUMP ASM FUEL>>
1 - Superseded	642650-1A3	PUMP ASM-FUEL
8 - Current	646768-5A1	FUEL PUMP ASSEMBLY
7 - Superseded	646768-3A4	FUEL PUMP ASSEMBLY>>
6 - Superseded	646768-3A1	FUEL PUMP ASM W/FITTING>>
5 - Superseded	646768-1A1	PUMP ASM FUEL>>
4 - Superseded	642650-1A2	PUMP ASM-FUEL
3 - Superseded	632818-7A3	PUMP ASM - FUEL
2 - Superseded	632818-7A2	PUMP-FUEL
1 - Superseded	632818-7A1	PUMP-FUEL
7 - Current	646767-5A2	FUEL PUMP ASSEMBLY
6 - Superseded	646767-4A4	FUEL PUMP ASSEMBLY>>
5 - Superseded	646767-4A2	PUMP ASM FUEL W/FITTING>>
4 - Superseded	646767-3A1	PUMP ASM FUEL W/FITT>>
3 - Superseded	646767-2A1	PUMP ASM W/FITTINGS FUEL>>
2 - Superseded	646767-1A1	PUMP ASM FUEL>>
1 - Superseded	643536-1A1	PUMP ASM - FUEL

12 - Current	646766-15A1	PUMP ASM FUEL W/FITTINGS
11 - Superseded	646766-14A3	PUMP ASM FUEL W/FITTINGS>>
10 - Superseded	646766-14A1	PUMP ASM FUEL W/FITTING>>
9 - Superseded	646766-9A1	PUMP ASM FUEL W/FITTS>>
8 - Superseded	646766-8A1	PUMP ASM FUEL W/FITT>>
7 - Superseded	646766-4A1	FUEL PUMP ASM>>
6 - Superseded	646766-3A1	FUEL/PUMP>>
5 - Superseded	646766-2A1	PUMP ASM W/FITTING-FUEL
4 - Superseded	646766-1A1	F/P ASM>>
3 - Superseded	643535-1A3	PUMP ASM-FUEL
2 - Superseded	643535-1A2	PUMP/F >>
1 - Superseded	643535-1A1	PMP ASM >>
4 - Current	646765-14A1	FUEL PUMP ASM W/FITTINGS
3 - Superseded	646765-7A1	PUMP ASM W/FITTINGS>>
2 - Superseded	640643-7A1	PUMP ASM W/FITTINGS-FUEL
1 - Superseded	640643-3A1	PMP >>
6 - Current	646765-13A1	FUEL PUMP ASM W/FITTINGS
5 - Superseded	646765-6A1	PUMP ASM W/FITTINGS>>
4 - Superseded	640643-6A1	PUMP ASM-FUEL W/FITTINGS
3 - Superseded	640643-1A2	PMP >>
2 - Superseded	640643-1A1	PUMP-FUEL
1 - Superseded	640645-1A1	PUMP-FUEL
8 - Current	649368-72A1	FUEL PUMP ASSEMBLY
7 - Superseded	649368-50A2	FUEL PUMP ASSEMBLY>>
6 - Superseded	649368-50A1	FUEL PUMP ASM W/FITTING>>
5 - Superseded	649368-38A1	FUEL PUMP ASM W/FITTING>>
4 - Superseded	649368-14A2	FUEL PUMP ASM W/FITTING>>
3 - Superseded	649368-14A1	FUEL PUMP ASM W/FITTING>>
2 - Superseded	646758-14A1	FUEL PUMP ASM W/FITTINGS
1 - Superseded	639508-14A1	FUEL PUMP ASSEMBLY>>
8 - Current	646212-50A7	FUEL PUMP ASM W/FITTINGS
8 - Superseded	RFQ ONLY	STATEMENT ONLY
7 - Superseded	646212-31A7	FUEL PUMP ASM W/FITT>>
6 - Superseded	646212-9A9	PUMP ASM W/FTTNGS-FUEL>>
5 - Superseded	638154-9A27	PUMP ASM-FUEL
4 - Superseded	638154-9A8	PUMP-FUEL
3 - Superseded	638156-3A11	PMP ASM >>
2 - Superseded	635135-3A11	FUEL PUMP
1 - Superseded	626062-3A11	FPUMP&SEPA
8 - Current	646212-50A6	FUEL PUMP ASM W/FITTINGS
7 - Superseded	646212-31A6	FUEL PUMP ASM W/FITT>>
6 - Superseded	646212-9A8	PUMP ASM W/FITT-FUEL>>
5 - Superseded	638154-9A26	PUMP ASM-FUEL
4 - Superseded	638154-9A7	PUMP-FUEL
3 - Superseded	638156-3A9	PUMP-FUEL
2 - Superseded	635135-3A9	PUMP-FUEL
1 - Superseded	626062-3A9	FPUMP&SEPA

8 - Current	646212-50A5	FUEL PUMP ASM W/FITTINGS
7 - Superseded	646212-31A5	FUEL PUMP W/FITT>>
6 - Superseded	646212-9A7	PUMP ASM W/FITT-FUEL>>
5 - Superseded	638154-9A25	PUMP ASM-FUEL
4 - Superseded	638154-9A6	PUMP-FUEL
3 - Superseded	638156-3A8	PMP ASM >>
2 - Superseded	635135-3A8	PUMP-FUEL
1 - Superseded	626062-3A8	FPUMP&SEPA
9 - Current	646212-50A12	FUEL PUMP ASM W/FITTINGS
8 - Superseded	646212-31A12	FUEL PUMP ASM W/FITT>>
7 - Superseded	646212-9A16	PUMP ASM W/FITT-FUEL>>
6 - Superseded	646212-9A6	PUMP ASM W/F>>
5 - Superseded	638154-9A24	PUMP ASM-FUEL
4 - Superseded	638154-9A4	PUMP-FUEL
3 - Superseded	638156-3A6	PMP ASM>>
2 - Superseded	635135-3A6	PUMP-FUEL
1 - Superseded	626062-3A6	FPUMP&SEPA
8 - Current	646212-50A3	FUEL PUMP ASM W/FITTINGS
7 - Superseded	646212-31A3	FUEL PUMP ASM W/FITT>>
6 - Superseded	646212-9A5	PUMP ASM W/FITT-FUEL>>
5 - Superseded	638154-9A23	PUMP ASM-FUEL
4 - Superseded	638154-9A3	PUMP-FUEL
3 - Superseded	638156-3A5	PMP ASM >>
2 - Superseded	635135-3A5	PUMP-FUEL
1 - Superseded	626062-3A5	FPUMP&SEPA
9 - Current	646212-50A2	FUEL PUMP ASM W/FITTINGS
8 - Superseded	646212-31A2	F/PUMP ASM W/FITTINGS>>
7 - Superseded	646212-9A4	PUMP ASM W/FTGS-FUEL>>
6 - Superseded	638154-9A22	PUMP ASM-FUEL
5 - Superseded	638154-9A2	PUMP-FUEL
4 - Superseded	638156-3A2	PMP ASM >>
3 - Superseded	638156-3A3	PUMP-FUEL
2 - Superseded	635135-3A3	PUMP-FUEL
1 - Superseded	626062-3A3	FPUMP&SEPA
9 - Current	646212-50A1	FUEL PUMP ASM W/FITTINGS
8 - Superseded	646212-31A1	F/PUMP ASM W/FITTINGS>>
7 - Superseded	646212-9A3	PUMP ASM W/FTGS FUEL>>
6 - Superseded	638154-9A21	PUMP ASM-FUEL
5 - Superseded	638154-9A1	PUMP-FUEL
4 - Superseded	638156-3A1	PUMP-FUEL
3 - Superseded	635135-3A1	* SUPSD BY 638156-3A1
2 - Superseded	626062-3A1	FPUMP&SEPA
1 - Superseded	626062-2A1	FPUMP&SEPA



11 - Current	646212-50A14	FUEL PUMP ASM W/FITTINGS
10 - Superseded	646212-31A14	FUEL PUMP ASM W/FITT>>
9 - Superseded	646212-9A18	PUMP ASM W/FTGS-FUEL>>
8 - Superseded	646212-9A11	PUMP ASM W/FITTINGS-FUEL
7 - Superseded	638154-9A29	PUMP ASM-FUEL
6 - Superseded	638154-9A15	PUMP-FUEL
5 - Superseded	638154-9A10	PUMP-FUEL
4 - Superseded	638156-3A16	PUMP-FUEL
3 - Superseded	638156-3A13	PUMP-FUEL
2 - Superseded	635135-3A13	FUEL PUMP
1 - Superseded	626062-3A13	FPUMP&SEPA
4 - Current	646212-50A11	FUEL PUMP ASM W/FITTINGS
3 - Superseded	646212-31A11	FUEL PUMP W/FITTINGS>>
2 - Superseded	646212-9A15	PUMP ASM W/FTGS-FUEL>>
1 - Superseded	638154-9A35	FUEL PUMP ASM
9 - Current	646212-50A10	FUEL PUMP ASM W/FITTINGS
8 - Superseded	646212-31A10	FUEL PUMP ASM W/FITT>>
7 - Superseded	646212-9A14	PUMP ASM W/FITT-FUEL>>
6 - Superseded	638154-9A33	PUMP ASM-FUEL
5 - Superseded	638154-9A20	PUMP-FUEL
4 - Superseded	638154-9A5	PUMP-FUEL
3 - Superseded	638156-3A7	PMP ASM >>
2 - Superseded	635135-3A7	* SUPSD BY 638156-3A7
1 - Superseded	626062-3A7	FPUMP&SEPA
9 - Current	646212-50A4	FUEL PUMP ASM W/FITTINGS
8 - Superseded	646212-31A4	FUEL PUMP ASM W/FITT>>
7 - Superseded	646212-9A13	PUMP ASM W/FITT-FUEL>>
6 - Superseded	638154-9A31	PUMP ASM-FUEL
5 - Superseded	638154-9A18	PUMP-FUEL
4 - Superseded	638154-9A9	PUMP-FUEL
3 - Superseded	638156-3A14	PUMP-FUEL
2 - Superseded	635135-3A14	* SUPSD BY 638156-3A14
1 - Superseded	626062-3A14	FPUMP&SEPA
9 - Current	646212-50A9	FUEL PUMP ASM W/FITTINGS
8 - Superseded	646212-31A9	FUEL PUMP ASM W/FITT>>
7 - Superseded	646212-9A12	PUMP ASM W/FTGS-FUEL>>
6 - Superseded	638154-9A30	PUMP ASM-FUEL
5 - Superseded	638154-9A16	PUMP-FUEL
4 - Superseded	638154-9A11	PUMP-FUEL
3 - Superseded	638156-3A17	PUMP-FUEL
2 - Superseded	638156-3A10	PUMP-FUEL
1 - Superseded	635135-3A10	FUEL PUMP
5 - Current	646212-49A1	FUEL PUMP ASM W/FITTINGS
4 - Superseded	646212-27A1	PUMP ASM W/FITTINGS-FUEL>>
3 - Superseded	646212-5A1	PUMP ASM W/FITTINGS-FUEL
2 - Superseded	638154-5A1	PUMP ASM-FUEL
1 - Superseded	638154-2A5	PUMP-FUEL

7 - Current	646212-48A1	FUEL PUMP ASM W/FITTINGS
6 - Superseded	646212-26A1	PUMP ASM W/FITTINGS-FUEL>>
5 - Superseded	646212-4A1	PUMP ASM W/FITT>>
4 - Superseded	638154-4A4	PUMP ASM- FUEL
3 - Superseded	638154-4A2	PUMP-FUEL
2 - Superseded	638154-4A1	*M* PUMP ASM-FUEL
1 - Superseded	630947-4A1	PUMP-FUEL
5 - Current	646212-46A2	FUEL PUMP ASM W/FITTINGS
4 - Superseded	646212-24A2	FUEL PUMP W/FITT>>
3 - Superseded	646212-2A3	PUMP ASM W/FITT-FUEL>>
2 - Superseded	638154-2A9	PUMP ASM - FUEL
1 - Superseded	638154-2A6	PUMP-FUEL
7 - Current	646212-46A3	FUEL PUMP ASM W/FITTINGS
6 - Superseded	646212-24A3	PUMP ASM W/FITTINGS-FUEL>>
5 - Superseded	646212-2A2	PUMP ASM W/FITTINGS-FUEL
4 - Superseded	638154-2A8	PUMP ASM - FUEL
3 - Superseded	638154-2A4	PUMP-FUEL
2 - Superseded	638154-2A2	PUMP-FUEL
1 - Superseded	630947-2A2	PUMP-FUEL
7 - Current	646212-46A1	FUEL PUMP ASM W/FITTINGS
6 - Superseded	646212-24A1	FUEL PUMP ASM W/FITT>>
5 - Superseded	646212-2A1	PUMP ASM W/FITT-FUEL>>
4 - Superseded	638154-2A7	PUMP ASM-FUEL
3 - Superseded	638154-2A3	PUMP-FUEL
2 - Superseded	638154-2A1	*M*PUMP ASM FUEL
1 - Superseded	630947-2A1	PUMP-FUEL
6 - Current	646212-45A10	FUEL PUMP ASM W/FITTINGS
5 - Superseded	646212-23A10	FUEL PUMP ASM W/FITT>>
4 - Superseded	646212-1A9	PUMP ASM W/FITT-FUEL>>
3 - Superseded	638154-1A23	PUMP ASM-FUEL
2 - Superseded	638154-1A22	PUMP-FUEL
1 - Superseded	638154-1A15	PUMP-FUEL
5 - Current	646212-45A9	FUEL PUMP ASM W/FITTINGS
4 - Superseded	646212-23A9	FUEL PUMP ASM W/FITT>>
3 - Superseded	646212-1A8	PUMP ASM W/FITT-FUEL>>
2 - Superseded	638154-1A21	PUMP ASM-FUEL
1 - Superseded	638154-1A13	PUMP-FUEL
6 - Current	646212-45A8	FUEL PUMP ASM W/FITTINGS
5 - Superseded	646212-23A8	FUEL PUMP ASM W/FITT>>
4 - Superseded	646212-1A7	PUMP ASM W/FITT-FUEL>>
3 - Superseded	638154-1A20	PUMP ASM-FUEL
2 - Superseded	638154-1A11	PUMP-FUEL
1 - Superseded	630947-1A11	PUMP-FUEL



7 - Current	646212-45A12	FUEL PUMP ASM W/FITTINGS
6 - Superseded	646212-23A12	PUMP ASM W/FITTING FUEL>>
5 - Superseded	646212-1A6	PUMP ASM W/FITT FUEL>>
4 - Superseded	638154-1A19	PUMP ASM-FUEL
3 - Superseded	638154-1A7	PUMP-FUEL
2 - Superseded	638154-1A4	PUMP-FUEL
1 - Superseded	630947-1A4	* SUPSD BY 638154-1A4
7 - Current	646212-45A7	FUEL PUMP ASM W/FITTINGS
6 - Superseded	646212-23A7	FUEL PUMP ASM W/FITT>>
5 - Superseded	646212-1A5	PUMP ASM W/FITT-FUEL>>
4 - Superseded	638154-1A18	PUMP ASM-FUEL
3 - Superseded	638154-1A6	PUMP-FUEL
2 - Superseded	638154-1A3	PUMP-FUEL
1 - Superseded	630947-1A3	PUMP-FUEL
7 - Current	646212-45A4	FUEL PUMP ASM W/FITTINGS
6 - Superseded	646212-23A5	FUEL PUMP ASM W/FITT>>
5 - Superseded	646212-1A12	PUMP ASM W/FITTINGS>>
4 - Superseded	646212-1A2	FUEL PUMP >>
3 - Superseded	638154-1A9	*M*PUMP ASM FUEL
2 - Superseded	638154-1A2	PUMP-FUEL
1 - Superseded	630947-1A2	* SUPSD BY 638154-1A2
5 - Current	646212-45A4	FUEL PUMP ASM W/FITTINGS
4 - Superseded	646212-23A4	PUMP ASM W/FITTINGS-FUEL>>
3 - Superseded	646212-1A15	PUMP ASM W/FITTINGS>>
2 - Superseded	646212-1A10	FUEL PUMP>>
1 - Superseded	638154-1A25	PUMP ASM-FUEL
5 - Current	646212-45A3	FUEL PUMP ASM W/FITTINGS
4 - Superseded	646212-23A3	PUMP ASM W/FITTINGS-FUEL>>
3 - Superseded	646212-1A14	PUMP ASM W/FITTINGS>>
2 - Superseded	646212-1A4	FUEL PUMP>>
1 - Superseded	638154-1A16	F/PUMP ASM(OPTION ONLY)
5 - Current	646212-45A2	FUEL PUMP ASM W/FITTINGS
4 - Superseded	646212-23A2	PUMP ASM W/FITTINGS-FUEL>>
3 - Superseded	646212-1A13	PUMP ASM W/FITTINGS>>
2 - Superseded	646212-1A3	FUEL PUMP>>
1 - Superseded	638154-1A12	F/PUMP ASM (OPTION ONLY)
7 - Current	646212-45A1	FUEL PUMP ASM W/FITTINGS
6 - Superseded	646212-23A1	PUMP ASM W/FITTINGS-FUEL>>
5 - Superseded	646212-1A11	PUMP ASM W/FITTINGS>>
4 - Superseded	646212-1A1	PUMP ASM >>
3 - Superseded	638154-1A8	*M*PUMP ASM FUEL
2 - Superseded	638154-1A1	PUMP-FUEL
1 - Superseded	630947-1A1	PUMP-FUEL
4 - Current	646212-53A1	FUEL PUMP ASM W/FITTINGS
3 - Superseded	646212-39A1	PUMP ASM W/FITTINGS-FUEL>>
2 - Superseded	646212-17A1	PUMP ASM W/FITTINGS-FUEL
1 - Superseded	638154-17A1	PUMP ASM FUEL

5 - Current	646212-52A3	FUEL PUMP ASM W/FITTINGS
4 - Superseded	646212-38A3	PUMP ASM W/FITTINGS-FUEL>>
3 - Superseded	646212-16A3	PUMP ASM FUEL>>
2 - Superseded	638154-16A6	PUMP ASM-FUEL
1 - Superseded	638154-16A3	PUMP-FUEL
5 - Current	646212-52A2	FUEL PUMP ASM W/FITTINGS
4 - Superseded	646212-38A2	FUEL PUMP W/FITT>>
3 - Superseded	646212-16A2	PUMP ASM W/FITT-FUEL>>
2 - Superseded	638154-16A5	PUMP ASM-FUEL
1 - Superseded	638154-16A2	PUMP-FUEL
4 - Current	646212-52A1	FUEL PUMP ASM W/FITTINGS
3 - Superseded	646212-38A1	FUEL PUMP ASM W/FITT>>
2 - Superseded	646212-16A1	PUMP ASM W/FITT-FUEL>>
1 - Superseded	638154-16A4	PUMP ASM - FUEL
3 - Current	646212-51A3	FUEL PUMP ASM W/FITTINGS
2 - Superseded	646212-34A3	FUEL PUMP ASM W/FITT>>
1 - Superseded	646212-12A3	FUEL PUMP ASM W/FITT>>
8 - Current	646212-51A1	FUEL PUMP ASM W/FITTINGS
7 - Superseded	646212-34A1	FUEL PUMP ASM W/FTGS>>
6 - Superseded	646212-12A1	PUMP ASM W/FTGS-FUEL>>
5 - Superseded	638154-12A2	PUMP ASM - FUEL
4 - Superseded	638154-12A1	PUMP-FUEL
3 - Superseded	638156-9A1	PUMP-FUEL
2 - Superseded	635135-9A1	PUMP-FUEL
1 - Superseded	626062-9A1	FPUMP&SEPA
10 - Current	646211-5A3	FUEL PUMP ASSEMBLY
9 - Superseded	646211-4A6	FUEL PUMP ASSEMBLY>>
8 - Superseded	646211-4A3	FUEL PUMP ASM W/FITT>>
7 - Superseded	646211-2A4	FUEL PUMP ASM>>
6 - Superseded	646211-1A4	PUMP ASM W/FITTINGS -FUEL
5 - Superseded	646211-1A2	PMP ASM>>
4 - Superseded	642380-1A4	PUMP ASM-FUEL
3 - Superseded	642380-1A2	PMP >>
2 - Superseded	632818-6A2	PUMP-FUEL
1 - Superseded	630751-4A3	PUMP FUEL
4 - Current	646211-5A1	FUEL PUMP ASSEMBLY
3 - Superseded	646211-4A4	FUEL PUMP ASSEMBLY>>
2 - Superseded	646211-4A1	FUEL PUMP ASM W/FITT>>
1 - Superseded	646211-2A3	FUEL PUMP ASM>>
4 - Current	646211-5A2	FUEL PUMP ASSEMBLY
3 - Superseded	646211-4A5	FUEL PUMP ASSEMBLY>>
2 - Superseded	646211-4A2	FUEL PUMP ASM W/FITT>>
1 - Superseded	646211-2A2	PUMP ASM FUEL>>

9 - Current	646211-5A1	FUEL PUMP ASSEMBLY
8 - Superseded	646211-4A4	FUEL PUMP ASSEMBLY>>
7 - Superseded	646211-4A1	FUEL PUMP ASM W/FITT>>
6 - Superseded	646211-2A1	PUMP ASM W/FITTINGS>>
5 - Superseded	646211-1A3	PUMP ASM W/FITTINGS -FUEL
4 - Superseded	646211-1A1	PMP ASM>>
3 - Superseded	642380-1A3	F/P ASM>>
2 - Superseded	642380-1A1	PMP >>
1 - Superseded	632818-6A1	PUMP-FUEL
7 - Current	646210-28A1	FUEL PUMP ASSEMBLY
6 - Superseded	646210-20A2	FUEL PUMP ASSEMBLY>>
5 - Superseded	646210-20A1	FUEL PUMP ASM W/FITT>>
4 - Superseded	646210-9A1	PUMP ASM W/FITTINGS-FUEL
3 - Superseded	632818-9A3	PUMP-FUEL-ASM
2 - Superseded	632818-9A2	PUMP-FUEL
1 - Superseded	632818-9A1	PUMP-FUEL
5 - Current	646210-27A1	FUEL PUMP ASSEMBLY
4 - Superseded	646210-19A2	FUEL PUMP ASSEMBLY>>
3 - Superseded	646210-19A1	FUEL PUMP ASM W/FITT>>
2 - Superseded	646210-8A1	PUMP ASM-FUEL>>
1 - Superseded	632818-8A2	PUMP-FUEL-ASM
9 - Current	646210-26A1	FUEL PUMP ASSEMBLY
8 - Superseded	646210-15A2	FUEL PUMP ASSEMBLY>>
7 - Superseded	646210-15A1	FUEL PUMP ASM W/FITT>>
6 - Superseded	646210-4A1	PUMP ASM FUEL>>
5 - Superseded	632818-4A3	PUMP-FUEL-ASM
4 - Superseded	632818-4A2	PUMP-FUEL
3 - Superseded	632818-4A1	PUMP-FUEL
2 - Superseded	630751-2A2	PUMP-FUEL
1 - Superseded	630751-2A1	PUMP ASM-FUEL
9 - Current	646210-25A3	FUEL PUMP ASSEMBLY
8 - Superseded	646210-14A6	FUEL PUMP ASSEMBLY>>
7 - Superseded	646210-14A3	FUEL PUMP ASM W/FITT>>
6 - Superseded	646210-3A7	FUEL PUMP ASM>>
5 - Superseded	646210-3A4	PUMP ASM-FUEL>>
4 - Superseded	646210-3A3	PUMP-FU >>
3 - Superseded	632818-3A6	PUMP-FUEL-ASM
2 - Superseded	632818-3A3	PUMP-FUEL
1 - Superseded	641456-1A3	PUMP-FUEL
8 - Current	646210-25A2	FUEL PUMP ASSEMBLY
7 - Superseded	646210-14A5	FUEL PUMP ASSEMBLY>>
6 - Superseded	646210-14A2	FUEL PUMP ASM W/FITT>>
5 - Superseded	646210-3A6	FUEL PUMP ASM>>
4 - Superseded	646210-3A2	FUEL PUMP ASM>>
3 - Superseded	632818-3A5	PMP ASM-FUEL>>
2 - Superseded	632818-3A2	PUMP-FUEL
1 - Superseded	641456-1A2	PUMP-FUEL

8 - Current	646210-25A1	FUEL PUMP ASSEMBLY
7 - Superseded	646210-14A4	FUEL PUMP ASSEMBLY>>
6 - Superseded	646210-14A1	FUEL PUMP ASM W/FITT>>
5 - Superseded	646210-3A5	FUEL PUMP ASM>>
4 - Superseded	646210-3A1	PUMP ASM-FUEL>>
3 - Superseded	632818-3A4	PMP ASM-FUEL>>
2 - Superseded	632818-3A1	PUMP-FUEL
1 - Superseded	641456-1A1	PUMP-FUEL
6 - Current	646210-24A6	FUEL PUMP ASSEMBLY
5 - Superseded	646210-13A12	FUEL PUMP ASSEMBLY>>
4 - Superseded	646210-13A6	FUEL PUMP ASM W/FITT>>
3 - Superseded	646210-2A6	PUMP ASM FUEL>>
2 - Superseded	632818-2A8	PUMP ASM FUEL
1 - Superseded	632818-2A6	PUMP-FUEL
6 - Current	646210-24A5	FUEL PUMP ASSEMBLY
5 - Superseded	646210-13A11	FUEL PUMP ASSEMBLY>>
4 - Superseded	646210-13A5	FUEL PUMP ASM W/FITT>>
3 - Superseded	646210-2A5	PUMP ASM FUEL>>
2 - Superseded	632818-2A7	PUMP ASM-FUEL
1 - Superseded	632818-2A5	PUMP-FUEL
4 - Current	646210-24A4	FUEL PUMP ASSEMBLY
3 - Superseded	646210-13A10	FUEL PUMP ASSEMBLY>>
2 - Superseded	646210-13A4	FUEL PUMP ASM W/FITT>>
1 - Superseded	646210-2A4	PUMP ASM FUEL>>
5 - Current	646210-24A3	FUEL PUMP ASSEMBLY
4 - Superseded	646210-13A9	FUEL PUMP ASSEMBLY>>
3 - Superseded	646210-13A3	FUEL PUMP ASM W/FITTING>>
2 - Superseded	646210-2A3	PUMP ASM FUEL>>
1 - Superseded	632818-2A3	*M* PUMP ASM-FUEL
5 - Current	646210-24A2	FUEL PUMP ASSEMBLY
4 - Superseded	646210-13A8	FUEL PUMP ASSEMBLY>>
3 - Superseded	646210-13A2	FUEL PUMP ASM W/FITTING>>
2 - Superseded	646210-2A2	PUMP ASM FUEL>>
1 - Superseded	632818-2A2	*M* PUMP ASM-FUEL
5 - Current	646210-24A1	FUEL PUMP ASSEMBLY
4 - Superseded	646210-13A7	FUEL PUMP ASSEMBLY>>
3 - Superseded	646210-13A1	FUEL PUMP ASM W/FITTING>>
2 - Superseded	646210-2A1	PUMP ASM FUEL>>
1 - Superseded	632818-2A1	*M* PUMP ASM-FUEL
6 - Current	646210-23A1	FUEL PUMP ASSEMBLY
5 - Superseded	646210-12A2	FUEL PUMP ASSEMBLY>>
4 - Superseded	646210-12A1	FUEL PUMP ASM W/FITT>>
3 - Superseded	646210-1A1	PUMP ASM FUEL>>
2 - Superseded	632818-1A1	*M* PUMP ASM-FUEL
1 - Superseded	632818-1	* FUEL PUMP ASSEMBLY

5 - Current	646210-30A6	FUEL PUMP ASSEMBLY
4 - Superseded	646210-22A13	FUEL PUMP ASSEMBLY>>
3 - Superseded	646210-22A6	FUEL PUMP ASM W/FITT>>
2 - Superseded	646210-11A6	PUMP ASM FUEL>>
1 - Superseded	632818-11A6	PUMP ASM FUEL
5 - Current	646210-30A5	FUEL PUMP ASSEMBLY
4 - Superseded	646210-22A12	FUEL PUMP ASSEMBLY>>
3 - Superseded	646210-22A5	FUEL PUMP ASM W/FITT>>
2 - Superseded	646210-11A5	PUMP ASM FUEL>>
1 - Superseded	632818-11A5	PUMP ASM FUEL
5 - Current	646210-30A4	FUEL PUMP ASSEMBLY
4 - Superseded	646210-22A11	FUEL PUMP ASSEMBLY>>
3 - Superseded	646210-22A4	FUEL PUMP ASM W/FITT>>
2 - Superseded	646210-11A4	PUMP ASM FUEL>>
1 - Superseded	632818-11A4	PUMP ASM FUEL
5 - Current	646210-30A3	FUEL PUMP ASSEMBLY
4 - Superseded	646210-22A10	FUEL PUMP ASSEMBLY>>
3 - Superseded	646210-22A3	FUEL PUMP ASM W/FITT>>
2 - Superseded	646210-11A3	PUMP FUEL ASM>>
1 - Superseded	632818-11A3	PUMP ASM FUEL
5 - Current	646210-30A2	FUEL PUMP ASSEMBLY
4 - Superseded	646210-22A9	FUEL PUMP ASSEMBLY>>
3 - Superseded	646210-22A2	FUEL PUMP ASM W/FITTING>>
2 - Superseded	646210-11A2	PUMP ASM FUEL>>
1 - Superseded	632818-11A2	PUMP ASM FUEL>>
5 - Current	646210-30A1	FUEL PUMP ASSEMBLY
4 - Superseded	646210-22A8	FUEL PUMP ASSEMBLY>>
3 - Superseded	646210-22A1	FUEL PUMP ASM W/FITT>>
2 - Superseded	646210-11A1	PUMP ASM FUEL>>
1 - Superseded	632818-11A1	PUMP ASM FUEL
5 - Current	646210-29A1	FUEL PUMP ASSEMBLY
4 - Superseded	646210-21A2	FUEL PUMP ASSEMBLY>>
3 - Superseded	646210-21A1	FUEL PUMP ASM W/FITTING>>
2 - Superseded	646210-10A1	PUMP ASM FUEL>>
1 - Superseded	632818-10A1	PUMP ASM FUEL
3 - Current	RFQ ONLY	STATEMENT ONLY
2 - Superseded	643367A2	PUMP ASM - FUEL
1 - Superseded	643367A1	PUMP/F ASM >>
2 - Current	638193-1	PUMP ASSY-FUEL
1 - Superseded	638193	PUMP ASM-FUEL 2 STAGE
6 - Current	646212-47A1	FUEL PUMP ASM W/FITTINGS
5 - Superseded	646212-25A1	PUMP ASM W/FITTINGS-FUEL>>
4 - Superseded	646212-3A1	PUMP ASM W/FITTINGS-FUEL
3 - Superseded	638154-3A2	*M* PUMP ASM-FUEL
2 - Superseded	638154-3A1	PUMP-FUEL
1 - Superseded	630947-3A1	* SUPSD BY 638154-3A1
2 - Current	DISCONTINUED	STATEMENT ONLY
1 - Superseded	632818-2A4	PUMP ASM-FUEL